


What to do if ...


List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.




(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)


Malfunction indicator lamp



(Canada)




SRS warning light




(U.S.A.)

"ABS" warning light




(Canada)




(Flashes)


Automatic high beam indicator^{*1}



Electric power steering system warning light




Pre-collision system warning light^{*1}



(Blinking and then continuously on)

Tire pressure warning light



(Comes on)

Slip indicator



(Flashes)

"AFS OFF" indicator^{*1}


Follow the correction procedures.



Open door warning light




Low fuel level warning light




(On the instrument panel)

Driver's seat belt reminder light




(On the center panel)

Front passenger's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light^{*2}



Master warning light

For further information, refer to the Owner's Manual.

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Automatic high beam indicator^{*1}



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



"ECT SNOW" indicator



All-wheel drive lock indicator^{*1}



Cruise control indicator



Radar cruise control indicator^{*1}



Intuitive parking assist-sensor indicator^{*1}



"AFS OFF" indicator^{*1}



(Flashes)

Slip indicator



VSC off indicator



Eco Driving Indicator Light



SRS airbag on-off indicator^{*1}



SRS airbag on-off indicator^{*1}

For further information, refer to the Owner's Manual.

^{*1}: If equipped

^{*2}: It also turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

If the electronic key does not operate properly

Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key. (driver's door only) The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

Starting the engine



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.



If the engine doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings continuously.	The “ENGINE START STOP” switch was turned to ACCESSORY mode while the driver’s door was open (or the driver’s door was opened while the “ENGINE START STOP” switch was in ACCESSORY mode).	Close the driver’s door.
	The “ENGINE START STOP” switch was turned off while the driver’s door was open.	Close the driver’s door.